

BOARD SUPPORT PACKAGE

For Connect Tech NVIDIA® Jetson AGX Orin™ Carriers

BSP Version: ORIN-AGX-36.3.0 V004
Last Updated: 2024/10/07

1. Introduction

This Board Support Package adds support for the Connect Tech Jetson AGX Orin™ family of carrier boards to Linux4Tegra. It includes any extra files required to use all the features of Connect Tech carriers.

Please check Section 3 for supported features for your board and Section 8 for the changes made between versions. You can check which version of the BSP you have installed by running:

```
cat /etc/cti/CTI-L4T.version
```

Check for the Latest Version of the CTI-L4T BSP at:
<https://connecttech.com/resource-center/l4t-board-support-packages/>

2. Requirements

- x86/x64 based host machine running Ubuntu 20.04 or 22.04
- JetPack 6 / L4T 36.3.0 installed (see Section 4)
- AGX Orin™ module
- Connect Tech AGX Orin™ Carrier
- USB Cable for flashing

*L4T version can be found in /etc/nv_tegra_release and will look like this:
R36 (release), REVISION: 3.0

3. BSP Features

3.1 Supported Modules in BSP

- AGX Orin™ 32GB
- AGX Orin™ 64GB

- AGX Orin™ Industrial

3.2 Supported Cameras in BSP

- Econ NileCAM82
- Leopard IMX390
- Stereolabs ZEDX
- Leopard OWL

3.3 Product Specific Details

AGX201 (Forge)

- 10G and 1G ethernet Support.
- CAN Support.
- Display Port Support.
- USB 3.2 Support.
- USB OTG Support.
- I2C Support.
- SPI Support.
- UART Support.
- RS232/485 Support.
- GPIO Support.
- M.2 pcie Support.
- Key E 2230 Wifi/BT.
- Key B 3042/3052 LTE/5G with micro SIM.
- Micro SD support.
- Oculink support
- Endpoint Mode not Supported
- JCB002 GMSL adapter support.

AGX202 (Rogue-Orin)

- x2 10G ethernet Support.
- CAN Support.
- HDMI Support.
- USB 3.2 Support.
- USB OTG Support.
- I2C Support.
- SPI Support.
- UART Support.
- RS232/485 Support.
- GPIO Support.
- M.2 pcie Support.
- Key E 2230 Wifi/BT.

- Micro SD support.
- JCB002 GMSL adapter support.

3.4 Limitations and Known Issues

1. Due to firmware and bootloader limitations there is no way to move a module flashed from one AGX Orin™ carrier to another without reflashing. This includes the NVIDIA® Devkit. This means a module flashed for the AGX Orin™ Devkit cannot be used with a CTI carrier without reflashing the module.
2. Some intel WiFi cards may fail to detect intermittently due to a memory access issue with PCIe controller C7.
3. An intermittent error has been observed where Ubuntu will get stuck launching the desktop. If this occurs, reset the device.
4. It has been observed sometimes after flash that the oem setup may fail to launch on the display interface. If this happens, a simple work around is setting a default username and password from Linux_for_Tegra before flashing.
run `tools/l4t_create_default_user.sh -u <username> -p <password>`
to achieve this.
Running the oem-setup through the console port, by disconnecting the display port and connecting to the console port before booting the device is also an acceptable workaround.
5. Text input lag has been observed when using a terminal on Ubuntu's graphical interface. Note that this issue is not present through SSH or the console port. Delay can potentially be mitigated by installing the following packages.
`sudo apt install mutter-common libmutter-10-0 gir1.2-mutter-10`
6. When streaming Stereolabs ZEDx cameras using the `gst-launch-1.0` command (not the SDK) after a soft reboot (reboot command), the cameras may fail to stream again with `gst-launch-1.0`,
a hard power off/on is required.
7. Master mode (internal trigger) for the Leopard OWL and Hawk is currently running at 45FPS, even though the streaming mode is set to 30FPS in the device tree. By default we are shipping configs for Hawk and OWL to use trigger mode so that the appropriate FPS can be achieved.

```
example. set pwm01 to 30FPS on Forge before streaming
cd /sys/class/pwm/pwmchip3
echo 0 > export
echo 33333333 > pwm0/period
echo 1000000 > pwm0/duty_cycle
```

You may also use this technique to achieve a custom trigger rate.

4. Installation

4.1 Obtaining NVIDIA® Jetpack

Before Installing the BSP you will need to install JetPack 6.0 on the host system using NVIDIA® SDK Manager (section 4.1.1) or from the NVIDIA® Embedded Download Center (section 4.1.2)

4.1.1 Installing JetPack from SDK Manager

Please follow installation steps from kdb373 for Jetpack 4.2+ <https://connecttech.com/resource-center/kdb373/>

4.1.2 Installing JetPack from NVIDIA® Embedded Download Center

1. Create a new directory for installing the Jetpack. Referred to as <BSP_ROOT> in these instructions.
2. Go to Jetpack Release Page <https://developer.nvidia.com/embedded/jetson-linux-r363>
3. Download the "L4T Driver Package (BSP)" and "Sample Root Filesystem" files for AGX Orin™
4. Put the "L4T Driver Package (BSP)" and "Sample Root Filesystem" in <BSP_ROOT>. Afterwards, you should have the following files in <BSP_ROOT>
 - jetson_linux_r36.3.0_aarch64.tbz2
 - tegra_linux_sample-root-filesystem_r36.3.0_aarch64.tbz2
5. Extract the "L4T Driver Package" tarball:

```
cd <BSP_ROOT>
sudo tar -jxf jetson_linux_r36.3.0_aarch64.tbz2
```
6. You should now have a new directory called Linux_for_Tegra in your <BSP_ROOT> folder. Extract the "Sample Root Filesystem" into Linux_for_Tegra/rootfs.

```
sudo tar -C Linux_for_Tegra/rootfs/ -xjf tegra_linux_sample-root-filesystem_r36.3.0_aarch64.tbz2
```

4.2 CTI BSP Installation

1. Copy the CTI-L4T-ORIN-AGX-36.3.0-V###.tgz package into <BSP_ROOT>/Linux_for_Tegra.

If you are using Nvidia's SDK manager then "<BSP_ROOT>" will be:

```
~/nvidia/nvidia_sdk/<JetPack_Version>_Linux_JETSON_AGX_ORIN_TARGETS/
```

Otherwise if manually installing from the NVIDIA® Embedded Download Center <BSP_ROOT> will be the folder created previously

```
cp CTI-L4T-ORIN-AGX-36.3.0-V###.tgz <BSP_ROOT>/Linux_for_Tegra
```

2. Extract the BSP: tar -xzf CTI-L4T-ORIN-AGX-36.3.0-V###.tgz

```
cd <BSP_ROOT>/Linux_for_Tegra
```

```
sudo tar -xzf CTI-L4T-ORIN-AGX-36.3.0-V###.tgz
```

3. Change into the CTI-L4T directory:

```
cd <BSP_ROOT>/Linux_for_Tegra/CTI-L4T
```

4. Run the install script (as root or sudo) to automatically install the BSP files to the correct locations:

```
sudo ./install.sh
```

```
#return to Linux_for_Tegra
```

```
cd ..
```

5. The CTI-L4T BSP is now installed on the host system and it should now be able to flash the AGX Orin™ module.

5. Flashing AGX Orin™ Modules

1. Connect the AGX Orin™ and Carrier to the computer via USB, following the instructions in the appropriate manual.

2. Put the system to be flashed into recovery mode, following the instructions in the appropriate manual

3. There are two options for flashing Jetson modules:

Using CTI's automated script:

```
./cti-flash.sh
```

Follow the menu and select your desired configuration. Once selected,

the device will start to flash.

Using the Manual Method:

Note do not add the ".conf" file extension to the <config> parameter:

Manual Flash: `./flash.sh cti/<module>/<boardname>/<config> mmcblk0p1`

<module> is orin-agx or orin-agxi (orin-agx industrial)

Example:

```
./flash.sh cti/orin-agx/forge/base mmcblk0p1
```

```
./flash.sh cti/orin-agxi/forge/base mmcblk0p1
```

4. Once the flashing has completed, the AGX Orin™ will reboot

6. Upgrading to a New Package Release

Upgrading L4T or CTI-BSP versions without reflashing is not currently supported.

7. Switching Profiles on AGX Orin™

1. Open a terminal on the AGX Orin™
2. Run `"sudo cti-orin-agx-fdt.sh"`
3. Select the profile you wish to switch to from the menu
4. Restart the system

Note: This script updates the dtb by appending/replacing the FDT variable in `extlinux.conf`

8. Change Log

Version ORIN-AGX-36.3.0-V004 Oct. 7, 2024

- Added support for LI-OWL with JCB002

Version ORIN-AGX-36.3.0-V003 Sept. 10, 2024

- Added support for ZEDX with JCB002

Version ORIN-AGX-36.3.0-V002 July 31, 2024

- Added Fix for AGX Orin™ 64GB gpu boot issues.
- Added Fix for switching power modes at runtime.
- Added Fix for nvfancontrol service.

Version ORIN-AGX-36.3.0-V001 July 02, 2024

- Initial Release of AGX Orin™ on Jetpack 6.0 l4t 36.3.0.

Contact Connect Tech

If you have any problems, questions or suggestions regarding the Board Support Package and hardware, please feel free to contact Connect Tech Inc.

Contact Information	
Support	<p>Please go to the Connect Tech Resource Center for product manuals, installation guides, device drivers, BSPs and technical tips.</p> <p>Submit your technical support questions to our support engineers. Technical Support representatives are available Monday through Friday, from 8:30 a.m. to 5:00 p.m. Eastern Standard Time.</p>
Contact Information	<p>support@connecttech.com sales@connecttech.com www.connecttech.com</p> <p>Toll Free: 800-426-8979 (North America only) Telephone: +1-519-836-1291 Facsimile: 519-836-4878 (on-line 24 hours)</p>