



**Crimp Terminal
Molex 501334-0000 or equivalent**

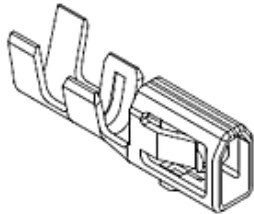

Completed Assembly

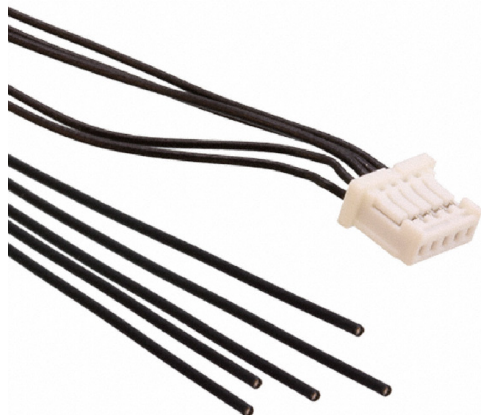


Assembly Instructions

1. Crimp terminal should be Molex 5013340000 or equivalent
2. Wires should be 28-32 AWG, colour black
3. Crimp wires and place in housing
4. Add CTIC-00510 label
5. Leaves wires at one end un-terminated
6. Finished cable should be 303mm long

Revision History

Revision	Description
0.00	Initial
0.01	Corrected crimp part number in note 1 above.

 Connect Tech Inc. <i>Embedded Computing Experts</i>	
Part #:	CTIC-00510 / CBG162
Drawn By:	Troy Hopkins
Date:	2015-02-06
Revision:	0.01