

SCREW, 6-32 X 2.00, PPHMS, ST.ZN. (2)
THREADLOCKER, APPLY ONE DROP
TO THREADS
TORQUE: 3.1 in-lb.

SCREW, 6-32 X .750, PPHMS, ST.ZN. (2)
THREADLOCKER, APPLY ONE DROP
TO THREADS
TORQUE: 3.1 in-lb.


SCREW, M3.0X0.5, PPHMS, 6.0mm
LONG, S.S. (4)
THREADLOCKER, APPLY ONE DROP
TO THREADS
TORQUE: 3.1 in-lb.

*THREADLOCKER TO BE PROVIDED
BY CUSTOMER*



ASSEMBLY STEPS:

1. PROPER ESD PROTECTION MUST BE USED DURING ASSEMBLY.
2. APPLY THERMAL PAD CENTERED TO UNDERSIDE OF FAN HEAT SINK. REMOVE FILM FROM BOTH SIDES OF PAD.
3. ASSEMBLE FAN HEAT SINK USING 4X M3.0 SCREWS.
4. ASSEMBLE FAN AND FAN GUARD AS SHOWN IN DIAGRAM.

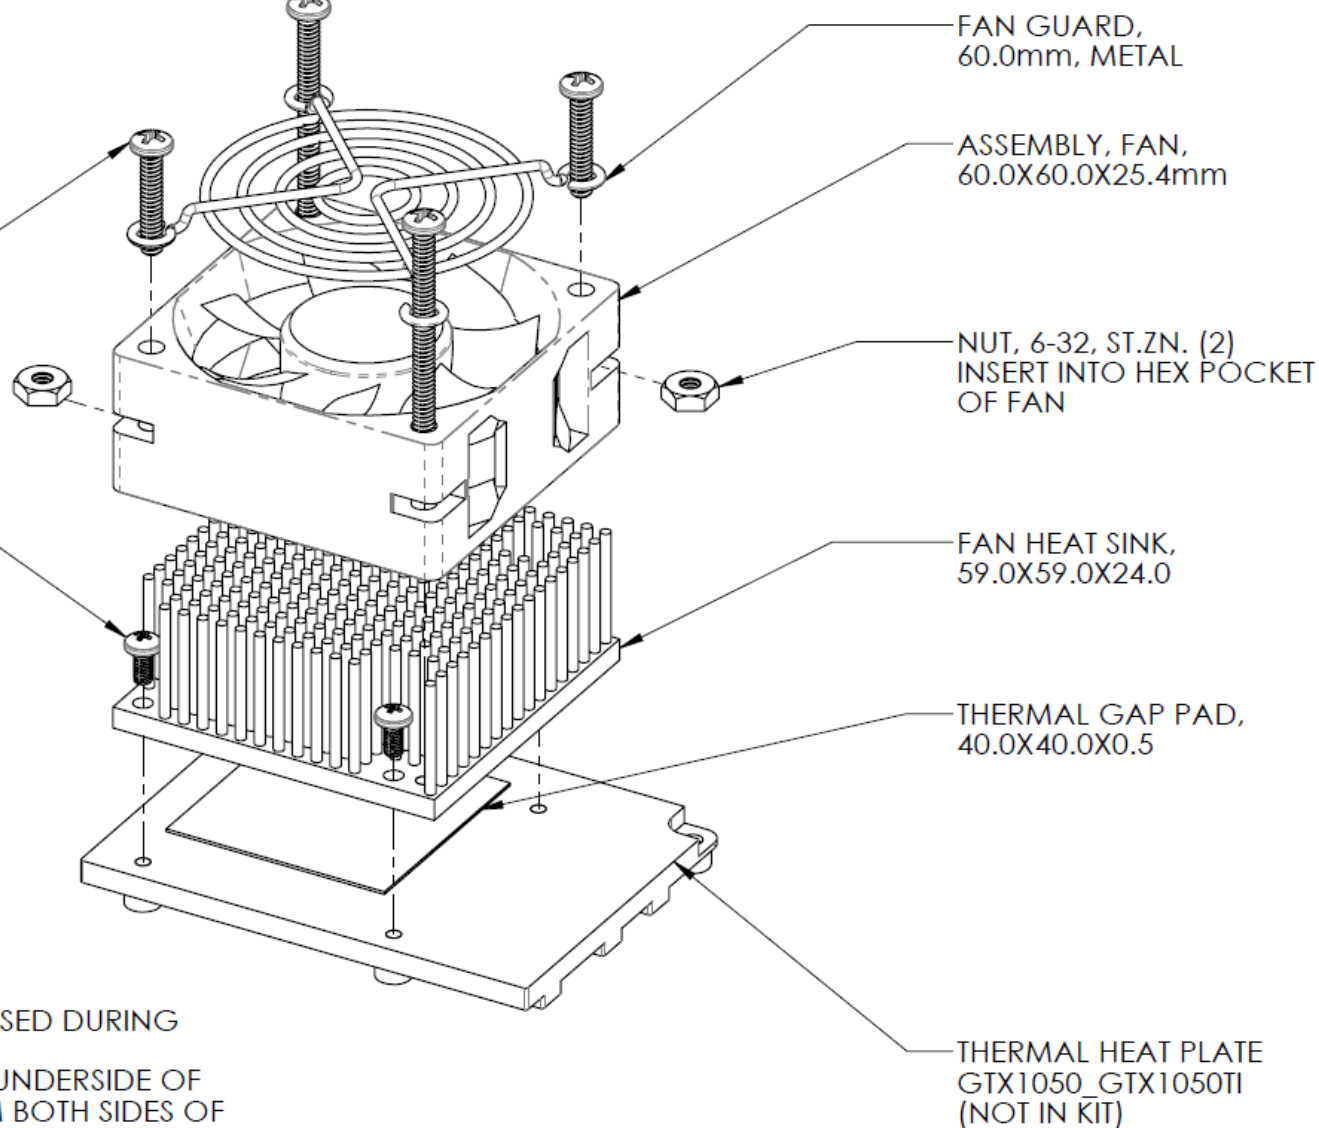

Connect Tech Inc.
Embedded Computing Experts

www.connecttech.com